





# INSTALLATION MANUAL



## BALDR L.



AC220-240V | 50/60Hz | IP20 | Die cast

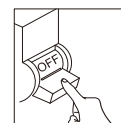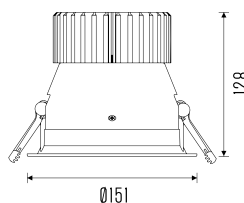

Do not operate with power supply connected.

<p><b>1</b></p>	<p><b>2</b></p> <p>Open a 140mm diameter hole in the ceiling.</p>	<p><b>3</b></p> <p>Connect the power supply (AC220-240V).</p>
<p><b>4</b></p> <p>Pull on the sketch clamp along the arrow direction.</p>	<p><b>5</b></p> <p>Clip upward and place the product in the hole in the ceiling.</p>	<p><b>6</b></p> <p>The installation is complete.</p>
<p><b>7</b></p> <p>Switch on the power, lighting.</p>	<p><b>8</b></p>	

### Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.