



INSTALLATION MANUAL



Part 1. Exchanging LED module









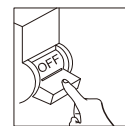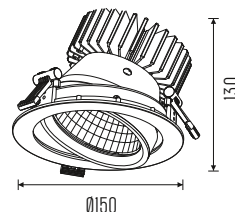

FULLA S HE X-FLIP



AC220-240V | 50/60Hz | IP20 | Die cast | Adjustable



Do not operate with power supply connected.

<p>1</p>  <p>Wear gloves to protect the reflector.</p>	<p>2</p>  <p>Unscrew the front ring.</p>	<p>3</p>  <p>Take out the reflector by turning it counterclockwise.</p>
<p>4</p>  <p>Remove the module by turning it counterclockwise.</p>	<p>5</p> <p>Ensure correct positioning.</p>  <p>Insert and secure the new module by turning it clockwise.</p>	<p>6</p> <p>Ensure correct positioning.</p>  <p>Install the reflector by turning clockwise.</p>
<p>7</p>  <p>Secure front ring.</p>		

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.



INSTALLATION MANUAL



Part 2. Installing the luminaire



FULLA S HE X-FLIP



AC220-240V | 50/60Hz | IP20 | Die cast | Adjustable

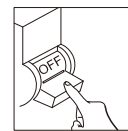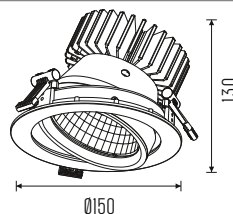

Do not operate with power supply connected.

<p>1</p>	<p>2</p> <p>Open a Ø140mm diameter hole in the ceiling.</p>	<p>3</p> <p>Connect the power supply (AC220-240V).</p>
<p>4</p> <p>Pull on the sketch clamp along the arrow direction.</p>	<p>5</p> <p>Clip upward and place the product in the hole in the ceiling.</p>	<p>6</p> <p>The installation is complete.</p>
<p>7</p> <p>Switch on the power, lighting.</p>	<p>8</p>	

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.